


Panasonic®

Personal Computer **Reference Manual (Display Rotation)**

Model No. **CF-T2 Series**

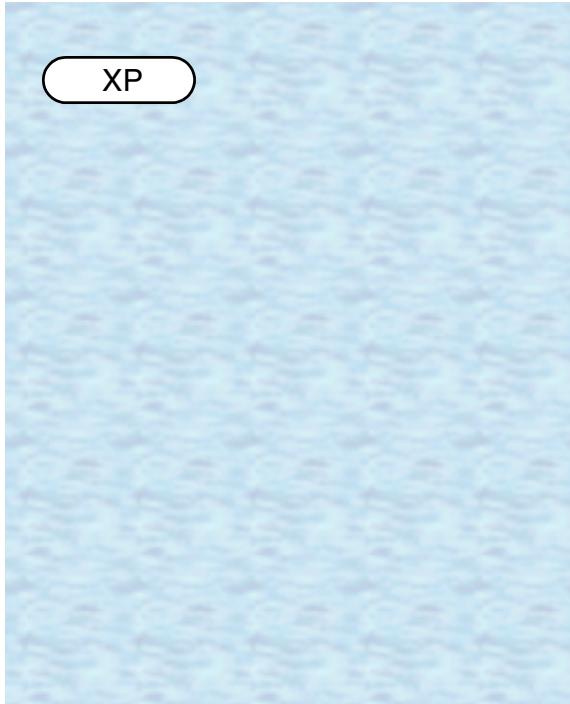

We recommend that this Reference Manual be printed.

This manual explains how to rotate the display.

Reference Manual (Display Rotation)

 BACK **2** NEXT 

After Windows is started up, you can rotate the display and perform the touch pad and touchscreen operations in the rotated mode.

Rotating the Display

- 1 Double-click  on the taskbar or press **Ctrl** + **Alt** + **R**
Each time this operation is performed, the screen display switches between the landscape mode (0 degrees) and the previously set angle (→ [page 3](#)).

■ To select the angle and rotate the display


- 1 Right-click  on the taskbar, and then select the angle
You can select rotation angles of 90, 180, or 270 degrees from the landscape mode.

NOTE

- Rotate the display to [0 degrees] before performing the calibration.
- Be sure to use the above procedures to rotate the display.

Changing the Settings

By using the Display Rotation Tool, you can change the settings of the display rotation.

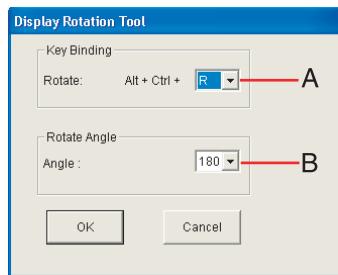

- 1** Right-click  on the taskbar, and then select [Setting...].
- 2** Change the settings.
 - A. Changing the key combination
(Only the third key can be changed.)
 - B. Changing the angle
(Default: 180 degrees)
- 3** Select [OK].

Exiting the Tool

- 1** Rotate the display to landscape mode (0 degree).
- 2** Right-click  on the taskbar, and then select [Exit].
 - In the default mode, the Display Rotation Tool will start up when Windows starts up.
 - To restart the tool after exiting:
Select [start] - [All Programs] - [Panasonic] - [Display Rotation Tool].

NOTE

- The display cannot be rotated when the [Command Prompt] is set to "Full Screen".
- When some applications are running, the display may not be rotated and the operation of the touch pad and the touchscreen may not match the display angle. Press **Ctrl** + **Alt** + **R**. After exiting the application, rotate the display, then start up the application again.
- The computer's performance will decrease somewhat.

- While the display is rotated:
 - Do not use the Extended Desktop (The touch pad or touchscreen may fail to operate properly).
 - Do not calibrate the touchscreen.
 - Do not set the display resolution larger than the resolution of the internal LCD.
- If moving video is played while the display is rotated, the picture may not be displayed properly or the sound may be broken up. This problem can be corrected by rotating the display to [0 degrees].
- The touch pad scroll function does not work while the display is rotated.
- Do not use the Fast User Switching Function while the display is rotated.
- If the display is rotated when the resolution is set to 800x600 pixels, depending on the Windows specifications, incorrect values may be shown for the resolution displayed in [Screen resolution] of [Display Properties]. Continue using these settings, without changing [Screen resolution].

Dealing with Problems

The display cannot be changed and the operation of the touch pad and the touchscreen do not match the display angle	<ul style="list-style-type: none">● When some applications are running, the display may not be rotated and the operation of the touch pad and the touchscreen may not match the display angle. Press Ctrl + Alt + R. After exiting the application, rotate the display, then start up the application again.● If the problem persists, restart the computer.
When the screensaver starts while the display is rotated, nothing is displayed on the screen	<ul style="list-style-type: none">● Some screensaver types do not display anything on the screen for the first minute or so. Try changing the screensaver type.

● Copyright

This manual is copyrighted by Matsushita Electric Industrial Co., Ltd. with all rights reserved. No part of this manual may be reproduced in any form without the prior written permission of Matsushita Electric Industrial Co., Ltd.

No patent liability is assumed with respect to the use of the information contained herein.

© 2004 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.

● Disclaimer

Computer specifications and manuals are subject to change without notice. Matsushita Electric Industrial Co., Ltd. assumes no liability for damage incurred directly or indirectly from errors, omissions or discrepancies between the computer and the manuals.

● Trademarks

- Microsoft, Windows and the Windows logo are registered trademarks of Microsoft Corporation of the United States and/or other countries.
- Panasonic is a registered trademark of Matsushita Electric Industrial Co., Ltd.

PCE0156A_XP